



# 1971 Montclair Modern

7155 SW Westgate Way Portland, Oregon 97225


3635 Combined Sq Ft

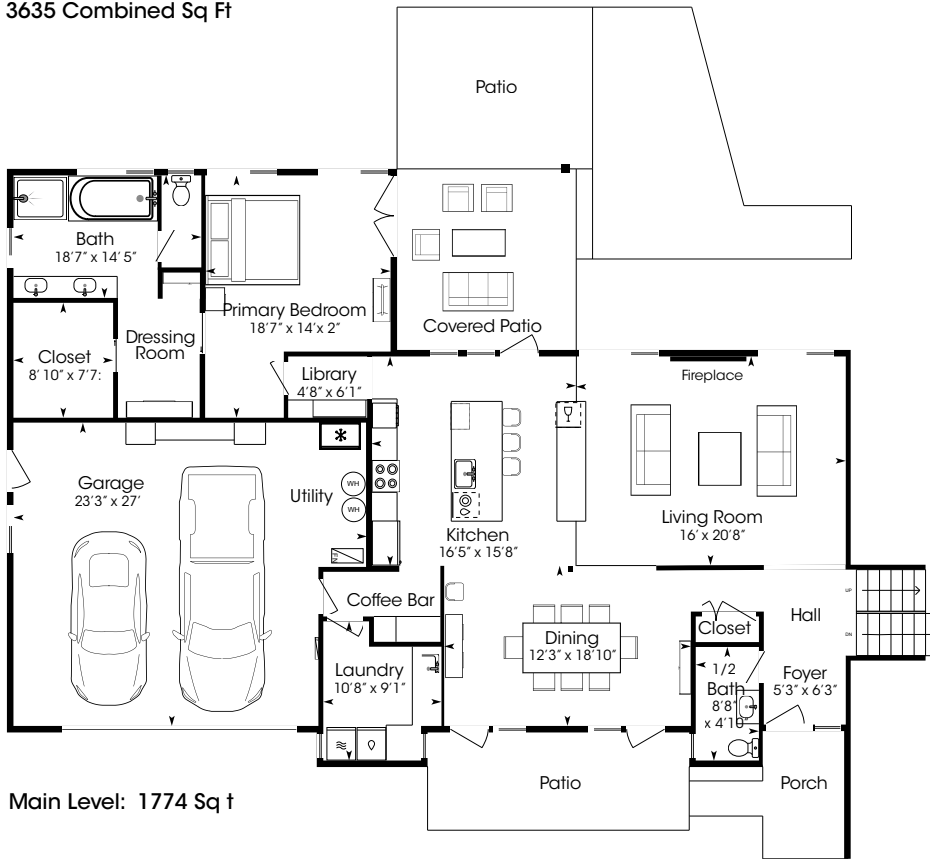

Main Level: 1774 Sq Ft

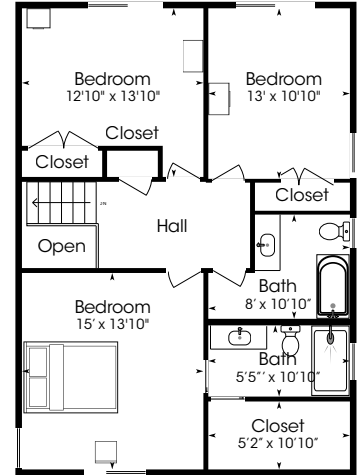

Upper: 920 Sq Ft

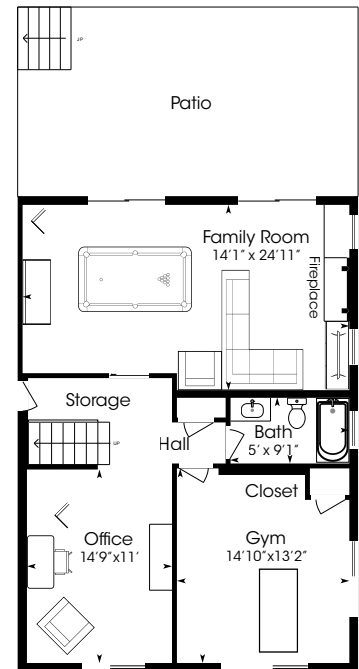

Lower: 941 Sq Ft

\* Measurements are an A-Quality Measurement approximation only and not to be relied upon. Buyers to verify all measurements for themselves.